

IF IN THE VEHICLE SETTINGS THERE ISN'T THE CHANGE TIME MENU,
AND YOU WANT TO SET THE VEHICLECLOCK?
PLEASE FOLLOW THE PROCEDURE BELOW:

ATTENTION: CHANGE TIME MENU

- The vehicle must be stationary with the handbrake on
- Turn on and off the vehicle (Key in pos. n°2) for three times;
- Use "volume +" to increase the hours
- Use "Volume -" to increase the minutes
- Use "Voice" to change 12h/24h format

To exit the menu, switch off the car for at least 5 sec.



NOTE:

When turning on the car, the clock's hands automatically reach the correct time.

Please note that the clock can have a variation of roughly 1 minute per month.



All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
06/2020 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.


Steering wheel remote control interface installation kit for:

SMART

Model: For Two / For Four

Year: 2012 >


Kit content: SWRC CAN Bus interface wiring harness
antenna adapter
radio adapter

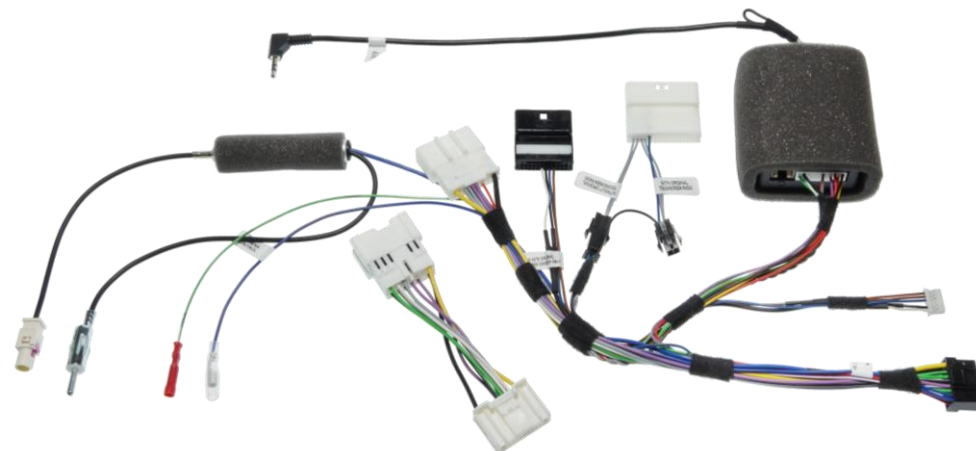

INSTALLATION MANUAL

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
06/2020 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

Content and wiring harness connections

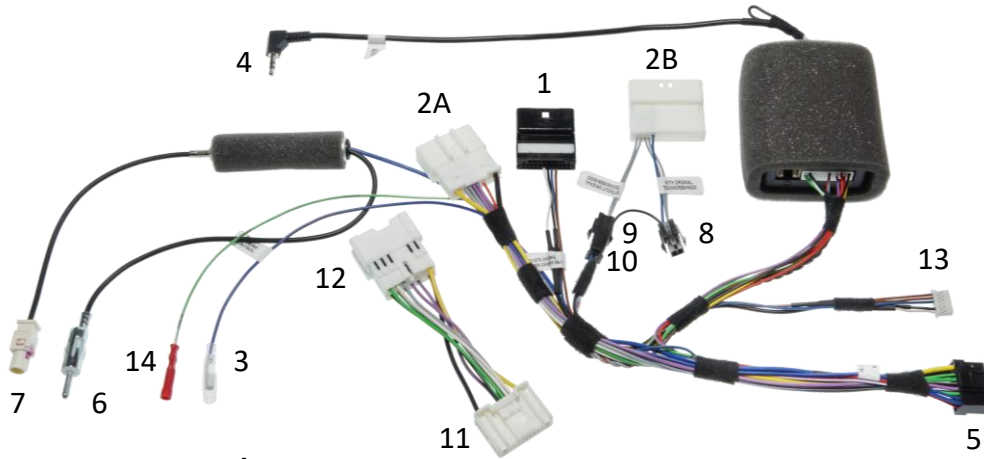

ATTENTION!

In order to prevent ESD damage, the WHEEL REMOTE JACK must be connected before plugging in the connectors on car side.

Connect cables to the radio side as follow:

- 1 - to CAR CONNECTOR (connect with original rear view camera only)
- 2A/2B - to CAR CONNECTORS
- 3 - CAMERA control / REMOTE output
- 4 - to the RADIO STEERING WHEEL REMOTE SOCKET
(NOTE: do not connect to microphone socket)
- 5 - to RADIO POWER CONNECTOR
- 6 - to RADIO ANTENNA CONNECTOR
- 7 - to CAR ANTENNA CONNECTOR
- 8 - to CONNECTOR 10
(if the vehicle is equipped with the original touchscreen radio)
- 9 - to CONNECTOR 10
(if the vehicle is NOT equipped with the original touchscreen radio)
- 11 - to 2A CONNECTOR (if the original radio is equipped with NAVI)
- 12 - to CAR CONNECTOR (if the original radio is equipped with NAVI)
- 13 - to RADIO CAMREA connector
(if the vehicle is equipped with OEM REAR VIEW CAMERA)
- 14 - SPEEDPULSE output



- 1- Volume +
- 2- Volume -
- 3- Short press > Accept incoming call
Long press > Voice

cut along the dotted line - copy for the vehicle owner